


ASSEMBLY INSTRUCTIONS

Armise 14" Sconce

Item # AMB2000

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

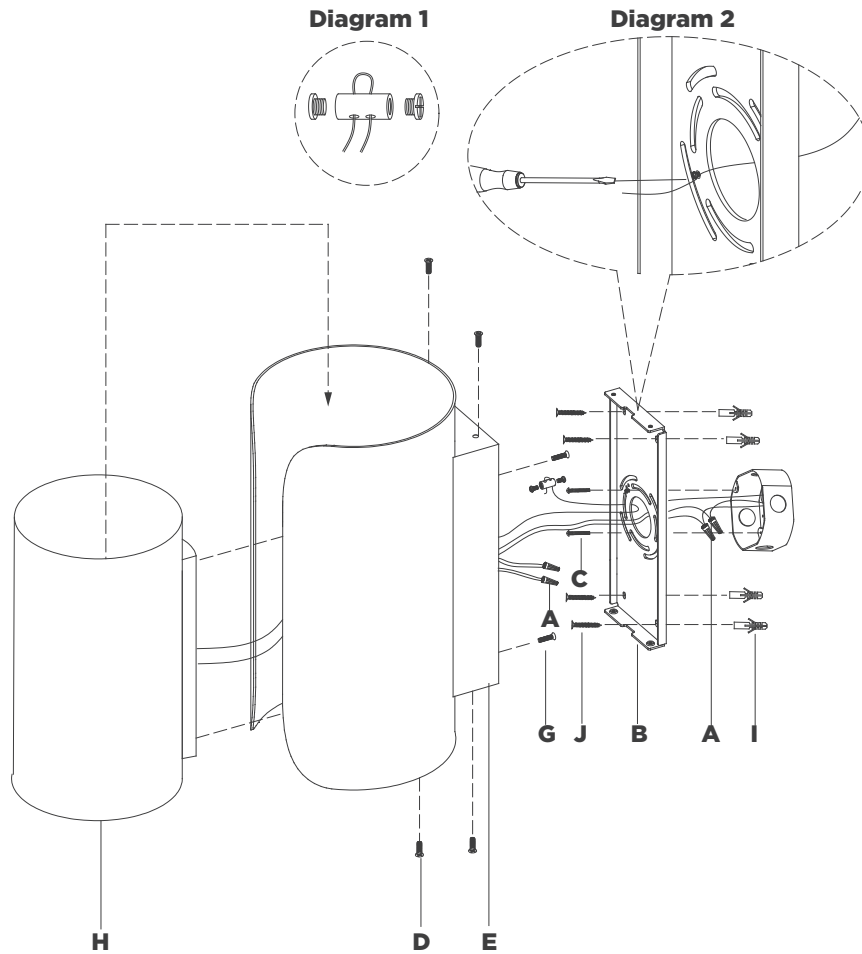

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Hammer
Pencil	Drill	

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove mounting plate **(B)** from fixture **(E)** by removing screws **(D)**.
3. Using mounting plate **(B)** as a guide, line up with the junction box and mark anchor positions.
4. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors **(I)** into the holes using a hammer.
5. Install mounting plate **(B)** to the junction box and secure with mounting screws **(C)**, then secure wood screws **(J)** to anchors **(I)**.
6. Feed fixture wires through center hole of fixture **(E)**, then install shade **(H)** to fixture **(E)** and secure with screws **(G)** as shown on diagram.
7. Connect fixture neutral wire (black) to driver output wire (black) using wire nut **(A)**.
8. Connect fixture hot wire (red) to driver output wire (red) using wire nut **(A)**.

