


ASSEMBLY INSTRUCTIONS

Trouve 23" Sconce

Item # KW2932

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

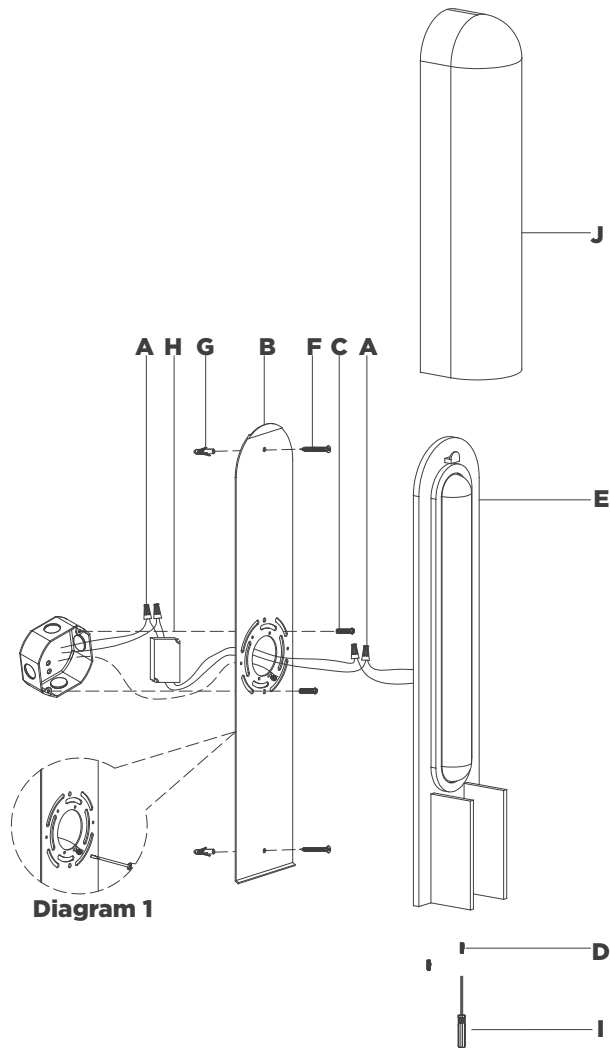

10. Connect fixture neutral wire (black) to driver **(H)** output wire (black) using wire nut **(A)**.
11. Connect fixture hot wire (red) to driver **(H)** output wire (red) using wire nut **(A)**.
CAUTION: Do not reverse the hot and neutral connections.
12. Make sure all wire connections are tight, then carefully tuck into the junction box.
13. Install fixture **(E)** to mounting plate **(B)** and secure with screws **(D)** using provided screwdriver **(I)**.
14. Hang shade **(J)** onto fixture **(E)**.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.