



## ASSEMBLY INSTRUCTIONS

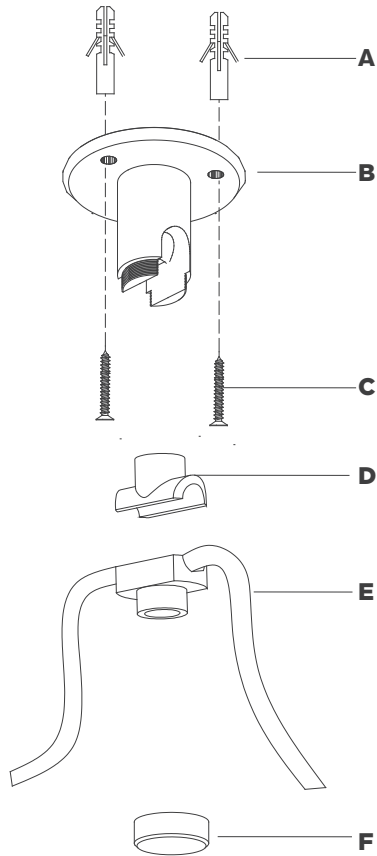

### Assembled View

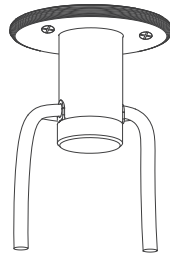

Signature 1.75" Single Cord Swag Mount

Item # VCC6000

### NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

### TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Hammer
Pencil	Drill	

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove threaded cap (F) and wire mounts (D & E) from ceiling mount (B).
3. Using ceiling mount (B) as a guide, line up with the junction box and mark anchor positions.
4. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors (A) into the holes using a hammer.
5. Install ceiling mount (B) to ceiling and secure with wood screws (C) to anchors (A).
6. Place fixture wire into slot of bottom wire mount (D).
7. Adjust fixture wire to desired height, then install wire mounts (D & E) to ceiling mount (B) and secure with threaded cap (F).

**CARE INSTRUCTIONS:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.